

Touchscreen/Monitor Calibration Instructions

Please read first

1. Connect DVD player to monitor using Neuro-Logic DVD Interconnect Cable.
2. Connect Video and Audio from DVD player to monitor.
3. Power up monitor and DVD player. Do not place a DVD in player.
4. Using the V7400 Remote Control, press "Setup" button to bring up the On-screen display.
5. **Locate calibration/cursor switch on the backside of the monitor and momentarily flip the switch to the CALIBRATE position.** There is no need to hold the switch in this position during calibration.
6. An arrow will appear in upper left corner of the screen. Accurately touch the arrow.
7. The arrow automatically moves to the lower right corner of the screen. Accurately touch the arrow.
8. Calibration is now complete. The arrow has now moved off screen to the right side. The next touch anywhere on the screen sets the calibration points in memory and no arrow will appear. Touching the screen in different locations will now verify the calibration by placing the cursor where you have touched.
9. **If operation without the cursor is desired, flip the switch to the CURSOR OFF position.**
10. Re-calibration is usually not necessary for the life of the unit, but can be done at any time.

For questions, contact Neuro Logic at 805-389-5435.