

CD-i/DVD Converter Calibration Instructions

Please read first

1. Connect DVD player to the converter DVD-out connector using Neuro-Logic Interconnect Cable.
2. Connect the TV CD-i cable to the CD-i in connector on the converter. Do not connect power to the converter at this time.
3. Connect Video and Audio from DVD player to the TV.
4. Connect power to the TV and the CD-i/DVD converter. Power up the TV and the DVD player.
5. Insert a DVD

NOTE: DVD must contain an active screen that has no active buttons in the upper left and lower right quarters of the screen. This screen CANNOT contain full motion video.

6. Locate the calibration switch (cal) on the converter and momentarily press the switch. There is no need to hold the switch in this position during calibration.
7. An arrow will appear in upper left corner of the screen. Accurately touch the arrow.
8. The arrow automatically moves to the lower right corner of the screen. Accurately touch the arrow.
9. Calibration is now complete. The arrow has now moved off screen. Touching the screen in different locations will now verify the calibration by placing the cursor where you have touched.
10. If operation without the cursor is desired, flip the switch to the CURSOR OFF position. A rapid blink of the cursor upon touch is normal operation in this mode.
11. Re-calibration is usually not necessary for the life of the unit, but can be done at any time.

If you have questions, contact Neuro Logic at 805-389-5435.